

## **PC-converting music on CD to WMA for H2O Man**

1. Open Windows Media Player and insert music disk into CD drive
2. Go to the Rip tab and you should see all of the songs from the CD. You can unclick the songs that you do not want ripped to your computer.
3. Press the “start RIP” button in the bottom right corner. Each song will be burned to your computer under “My music” under My Documents. It will be named either unknown music or artist name. Double click on the folder until you reach the music files. You can put either the songs or the folders on the H2Oman. **MAKE SURE** that you do not put any cover artwork in the folder as it will make the player not work properly.
4. Plug in your SD card into the SD card reader and place in your USB port and go to My computer. Click on “removable disk”. Copy and paste the files to the SD card. Put the SD card back into the player and slide the lock into place. To turn on the H2Oman, push the power button for 3-5 seconds and push the play button. You should have a blinking blue light on the H2Oman G3.